

## USING THE STYLUS

- 1) Lightly touch or slide the stylus across the touch screen.
- 2) Use the stylus only on the lower touch screen.
- 3) Use only enough pressure to operate the game. Excessive pressure may damage the touch screen.

*NOTE: Do not use the stylus if it is broken.  
Replace the stylus in the stylus holder  
when not in use*

## Troubleshooting

**Problem:** The touch screen doesn't work.

**Solution:** Make the stylus is being used on the correct area of the touch screen. Check the alignment of the stylus contact point using the touch screen adjustment (check the Nintendo DS Instruction Manual).

**dreamGEAR®**  
[www.dreamgear.net](http://www.dreamgear.net)

for  
**Nintendo®  
DS Lite**



**FOR TECHNICAL SUPPORT  
PLEASE CONTACT: 1-877-999-DREAM  
or [support@dreamgear.net](mailto:support@dreamgear.net)**